## **OMRON**

# Model K8AB-PH

## Measuring & Monitoring Relay

#### **English** Instructions Manual

Thank you for purchasing an OMRON pridyct. In this In structions Manual, you will find information about this product's features, capabilities, and operating instructions Please observe the following when using this product.

- · This product is designed for use by qualified electrical eng neer
- · Read and understand this Instructions Manual thoroughly, and make proper use of this product.
- · Keep this Instructions Manual for future reference

#### **OMRON Corporation**

9419062-7 D

#### **Precautions for Safe Use**

Make sure to follow the instructions below to ensure safety.

- 1. Do not use or keep this product in the following environments.

  • Outdoors, or places subject to direct sunlight or
- wearing weather.

  Places where dust, iron powder, or corrosive gases(in
- particular, sulfuric or ammonia gas) exist.
- Places subject to static electricity or inductive noise
   Places where water or oil come in contact with the product
- Make sure to install this product in the correct direction.
- There is a remote risk of electric shock. Do not touch terminals while electricity is being supplied.

   Make sure to thoroughly understand all instructions in the Instructions Manual before handling this product.
- 5. Make sure to confirm terminal makings and polarity for
- 5. Make Sure to commitment makings and polarity for correct wiring.

  6. Ensure that terminal screws have been tightened firmly. Recommended torque: 0.49 N · m Assured torque: 0.59 N · m

  7. Operating ambient temperature and humidity for this
- product must be within the indicated rating when using this product.
- There is a remote risk of explosion. Do not use this product where flammable or explosive gas exists.

  Make sure that no weight rests on the product after
- 10. To enable an operator to turn off this product easily, install switches or circuit breakers that conform to relevant requirements of IEC60947-1 and IEC60947-3, and label them appropriately.

  11. For DC input, use a SELV power-supply capable of
- overcurrent protection. Specifically, a SELV power-supply has a double or reinforced insulation for input and output, and output voltage of 30Vr.m.s with 42.4V at peak or DC60V maximum. Recommended power-supply : Model S8VS-06024 (Omron product)
- 12. Do not turn a setting volume beyond the scope of

## **Precautions for Correct Use**

- For Proper Use

  (1) Do not use the product in the following locations.

  Places subject to radiant heat from heat generating
- Places subject to vibrations or physical shocks.

  Make sure to use setting values appropriate for the controlled object. Failure to do so can cause unintended operation, and may result in accident or corruption of the product.
  (3) Do not use thinner or similar solvent for cleaning. Use
- commercial alcohol.
- When discarding, properly dispose of the product as industrial waste.
- industrial waste.

  (5) Only use this product within a board whose structure allows no possibility for fire to escape.

  (6) This is a class A product. In residential areas it may cause radio interference, in which case the user may be required to take adequate measures to reduce interferer

  About Installation

  (1) When withing use only recompressed driving terminaler.
- When wiring, use only recommended crimp terminals
- When wiring, use only recommended dump some
   Do not block areas around the product for proper dissipation of heat. (If you do not secure space for the product will be heat dissipation, life cycle of the product will be
- compromised.)

- compromised.)
  (3) To avoid electrical shocks, make sure that power is not supplied to the product while wiring.

  Noise Conutermeasures
  (1) Do not install the product near devices generating strong high frequency waves or surges.
  (2) When using a noise filter, check the voltage and current and install it as close to the product as possible.
  (3) In order to prevent inductive noise, wire the lines connected to the product separately from power lines carrying high voltages or currents. Do not wire in carrying high voltages or currents. Do not wire in parallel with or on the same cable as power lines. Other measures for reducing noise include running lines along separate ducts and using shield lines

- lines along separate ducts and using shield lines.

  To avoid faulty operations, malfunctions, or failure, observe the following operating instructions.

  (1) Properly connect phase sequence.

  (2) When turning on the power, make sure to realize rated voltage within 1 second from the time of first supply of electricity.

  (3) Make sure to use power supply for operations, inputs, and transformer with the appropriate capacity and rated burden.
- and rainsoffner with the appropriate capacity and rated burden.

  (4) Maintenance and handling of this product may only be performed by qualified personnel.

  (5) Distortion ratio of input wave forms must be 30% or less. Use of this product with circuits that have large distortion in wave forms may result in unwanted
- (6) The type K8AB-PH can only detect phase interrupt ion when the power to the motor starts being supplied, and interruption while the motor is in operati on cannot be detected.

- (7) The type K8AB-PH can only detect phase interrupt -ion when the interruption occurs on the side where power supply exists from the point of connection, and interruption on the loading side cannot be detected.
- (8) This product cannot be used for thyrister controls or
- (9) When setting the volume, adjust the control from the minimum side to the maximum side.

# Applicable Standards

Installation environment	Installation Category III, Ponllution Degree 2				
Application Standard	EN60255-5/-6				
Safety Standard	EN60664-1				
	(EMI) EN61326+A1 Industrial applications				
	Terminal interference wave voltage CISPR11 Group1, ClassA : CISPR16-1/-2 Electromagnetic interference wave CISPR11 Group1, ClassA : CISPR16-1/-2				
	(EMS) EN61326+A1 Industrial applications				
	Electrostatic discharge	EN61000-4-2 : 4kV(Contact) 8kV(In air)			
EMC	Radiating radio- frequency electr -omagnetic field	EN61000-4-3 : 10V/m 1kHz Sine Wave Amplitude Modulation (80MHz to 1GHz)			
	Burst	EN61000-4-4 : 2kV(Power Line) 1kV(I/O Signal line)			
	Surge	EN61000-4-5 : 1kV with line (Power Line) 2kV with ground (Power Line)			
	Conducted RF	EN61000-4-6 : 3V(0.15 to 80MHz)			
	Power frequency magnetic field immunity	EN61000-4-8 : 30A/m			
	Voltage dip/Short interruptions	EN61000-4-11 : 0.5 Cycle, 0.180° each polarity 100% (Rated Voltage)			

#### Overview

This product is an electric controller for outputting an alarm upon detection of three-phase volt-

[3-phase Phase-sequence, Phase-loss Relay]

#### Specifications

## Rating

Dielectric Resistance	$20M\Omega$ minimum (at 500V) Between electric circuit and case
Dielectric Withstanding Voltage	2000V for 1 minute Between electric circuit and case
Noise Immunity	$\pm$ 1,500V on power-supply terminals in normal or common mode(Square wave with 1 ns at rearing Pulse duration 1 $\mu$ s/100ns)
Vibration Resistance	Vibrations : 10 to 55Hz, Acceleration : 50m/s <sup>2</sup> , X,Y,Z Directions : 5 min × 10 scanning
Shock Resistance	150m/s² (however, 100m/s² at relay contact point) 3 times each in 3 axis and 6 directions
Input Range	AC200 to 500V
Input Load	25VA maximum
Overload Capacity	115% of maximum input within range (continuous)/125%, 10s


#### Output Rating

Relay Output	Rated Load	Resistance Load : AC250V 6A, DC30V 6A
	Maximum Contact Point Voltage	AC250V, DC30V
	Maximum Contact Point Current	AC6A, DC6A
	Maximum Opening and Closing Capacity	1500VA, 180W
	Minimum Applicable Load (P Level)	DC5V, 10mA *Reference value
	Mechanical Life	10 million times minimum
		Electrical Life (Ambient temperature condition: +20°C)


#### ■ Installation \_\_\_\_\_

### Diagram of Outside Dimensions

Unit: mm

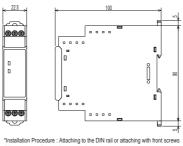


\*Measurements for attachment with front screws

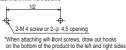


#### Installation Procedure

· Pull down the hook, and then fasten the upper tab onto the rail, fitting in the unit until the hook locks into place.

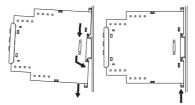

#### Uninstallation Procedure

· Using a flathead screwdriver or a similar tool, pull out the hook downward and lift the unit from the bottom.

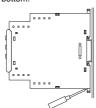

#### Fixing Bracket


Attach the type K8AB to the DIN rail.

• DIN Rail Type PFP-100N (1,000mm) Type PFP-50N (500mm)

#### Recommended Crimp Terminal

Recommended Crimp Terminal	Recommended Cable Diameter
AI 1,5-8BK (Phoenix Contact product)	AWG#16
AI 1-8RD (Phoenix Contact product)	AWG#18
AI 0,75-8GY (Phoenix Contact product)	AWG#18

### ■ Terminal Connections

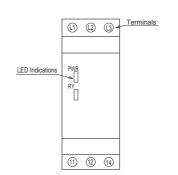


Name	Terminal Name	ne Description	
	L1	Input of three-phase voltage R-phase	
	L2	Input of three-phase voltage S-phase	
Terminals	L3	Input of three-phase voltage T-phase	
	11	Common for contact point output	
	12	b-contact output	
	14	a-contact output	
LED	PWR	Power indication	
Indications	RY	Contact point output status Light-on 11-14 conduction	

# ■ Time Chart ■ VIIII VIIII VIIII Loss Loss Loss L3/L2/L1 L1/L2/L3 RY



#### ■ Wiring Diagram ■

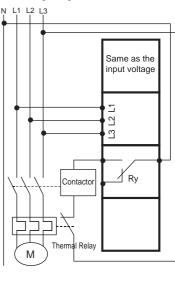

on Companies shall not be responsible for conformity with any standards, codes guilations which apply to the combination of the Product in the Buyer's applicati-ruse of the Product A Buyer's request. Common will provide applicable that part fication documents identifying ratings and limitations of use which apply to the suct. This information by itself is not sufficient for a complete determination of the billing of the Product in combination with the end product, machine, system, or the product of the pr

suitability of the Product in combination with the end product, machine, system, or where application or use. Buyer shall be solly responsible for determining appropriaeness of the particular Product with respect to Buyer's application, product or system buyer shall take application responsibility in all cases. NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRES STHE RISKS, AND THAT THE GHORON PRODUCTION IS PROPERTY ARTED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

# Contact Information

OMRON ELECTRONICS LLC.
One Commerce Drive Schaumburg, IL 60173-5302 U.S.A
Phone: 1-847-843-7900 Fax: 1-847-843-7787
OMRON EUROPE B.V.

Wregalaan 67-98, 2132 UD Hoofddorp The Netherlands Phone: 31-23-56-81-300 Fax: 31-23-56-81-388 OMRON ASIA-PACIFIC PTE. LTD. No.438A Alexandra Road #05-05/08(Lobby 2), Alexandra

Technopark, Singapore 119967 Phone: 65-6835-3011 Fax: 65-6835-2711 OMRON CORPORATION

3-4-10 Toranomon Minato-ku, Tokyo, 105-0001 Japan Phone: 81-3-3436-7260 Fax: 81-3-3436-7261